



Supplies and Tooling					
Part No.	Description	Qty	Part No.	Description	Qty


**1 Power on. Zero unit.**

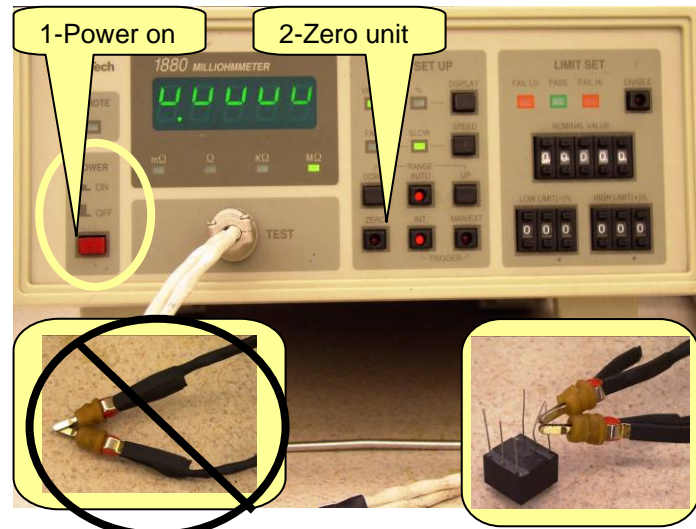


**2 Verify required values to print. Check minimums & maximums.**

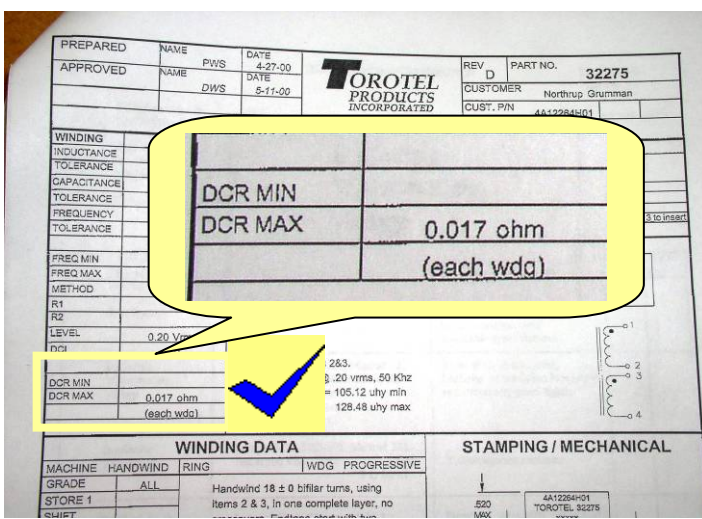

**3 Connect instrument to component as stated on print.**



**4 Verify print values against display.**



PASS—display values fall within acceptable range  
 FAIL—display values fall outside acceptable range